TOSIMA

TV-8000

Wireless TV Speaker
User Guide

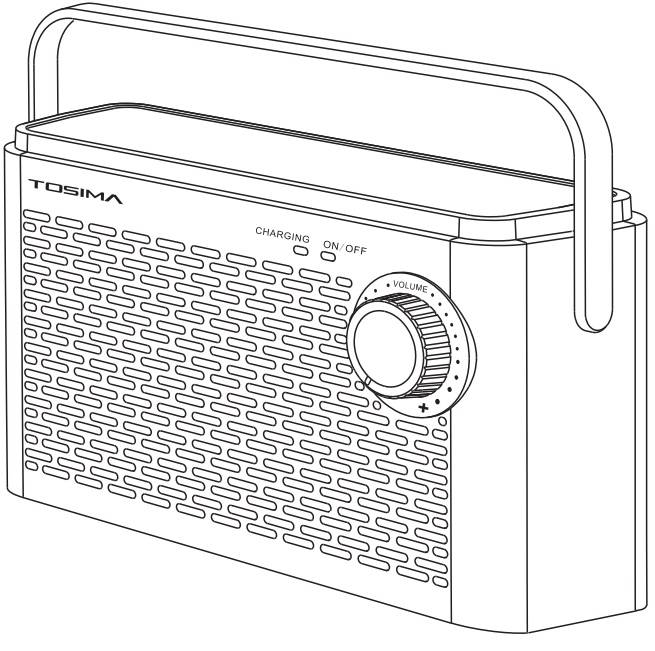

INDEX

ENGLISH

Important Safety Instructions	3
Package Contents	4
Features Identification	4
Connection & Setup	5-6
Battery Charging	6
Operation	6-7
Pairing	7
Using Headphone	8
Using The Receiver As Stand-Alone Speaker	8
Troubleshooting	9
Cleaning And Maintenance	9
Specifications	9
Fcc Information For USA Only	9

日本語

重要な安全注意事項	10
セット内容の確認	11
各部の名称	11
送信機を設置する	12-13
充電について	13
スピーカーの使い方	
オン/オフ、音量/トーン調整	14
送信機と受信機をペアリングする	14
ヘッドホンを使う	15
外部スピーカーとして使う	15
故障かな？と思ったとき	16
お手入れ	16
仕様	16

Thank you for your choice. To ensure you a quick and convenient use of your TV 8000, please read these instructions carefully prior to use. This short manual describes general features and warranty details.
We welcome your comments and suggestions. Please contact us at cs-tosima@outlook.com with any thoughts or problems.
For more details,please visit our official website:www.tosima.net.

IMPORTANT SAFETY INSTRUCTIONS:

Please read these instructions carefully before using the Wireless TV speaker.

- Always keep the speaker dry. Do not immerse in water.
- For your safety, do not attempt to open the unit or battery compartment. It will violate the warranty.
- The Wireless TV Speaker uses a lithium ion battery. Please obey the safety and handling instructions for the lithium ion battery.Please dispose of the unit/ used batteries properly,following any local regulations.
- Do not dispose of the unit/used batteries in the household trash.Do not incinerate.Take the equipment to a nearby recycle center.
- Do not unplug by pulling on the cord,but grasping the plug. Make sure to power off and unplug when the device is not in use. Do not operate any device with a damaged cord or plug, after the device malfunctions, dropped or damaged in any manner. Return device to the nearest authorized service facility for examination, repair or electrical / mechanical adjustment.
- This device is intended for home and personal use only.

PACKAGE CONTENT:

Your TV speaker is packaged with all of the items shown below. If anything is missing, please contact our Customer Care Department immediately.

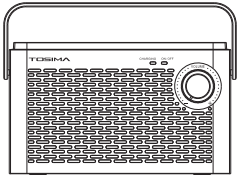

Wireless Receiver (Speaker)

AC Adapter



USB Power Cable

Transmitter

Audio Cable (3.5mm)

User Guide



(2RCA Plug to 3. 5 Jack Cable
Optional for Connection Flexibility)

FEATURE IDENTIFICATIONS:

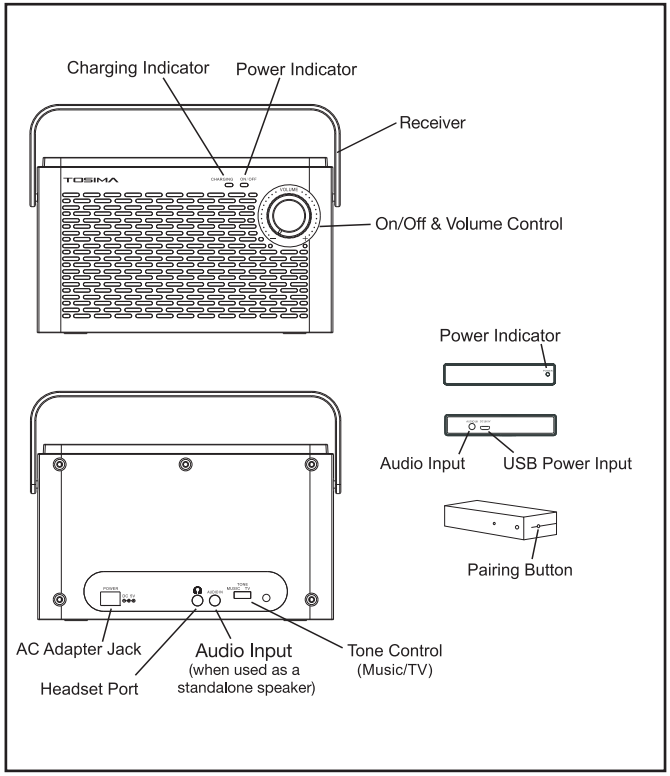

CONNECTION & SET UP:

1. If your TV has 3.5 headphone output, connect the 3.5 earphone output from TV for one side of audio cable and connect the 3.5 earphone input from transmitter for another side of audio cable, as shown below.

Note: In most cases, the TV speaker volume will be muted when using this type of connection.

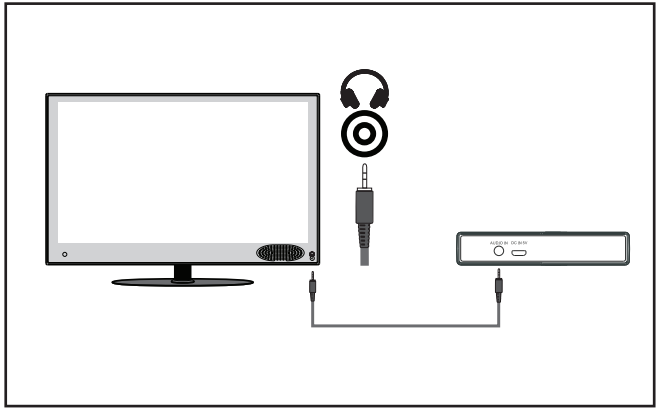

CONNECTION & SET UP (con't):

2. If your TV has RCA audio output jack, use the 3.5 audio cable to connect the transmitter to your TV by converting cable (2 RCA plug to 3.5 jack cable) as shown below.

Note: In most cases, TV speakers are **NOT** muted with this type of connection.

3. If your TV has USB outlet, insert the micro-USB plug into the power input of transmitter, and another bigger USB plug into the USB outlet of TV, to supply power for the transmitter.

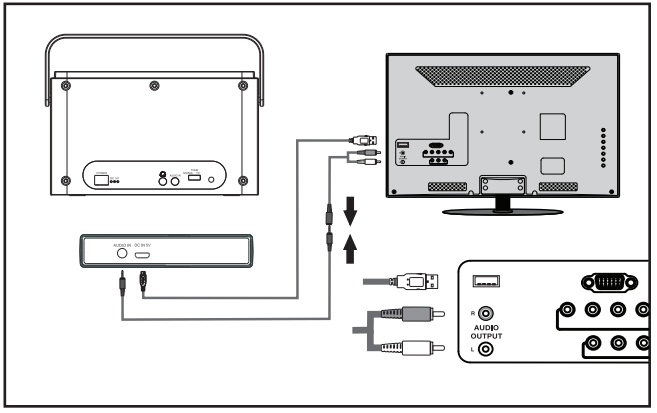

CONNECTION & SET UP (con't):

4. If your TV doesn't have USB outlet, use the adapter with USB outlet to supply power for the transmitter, as shown below.

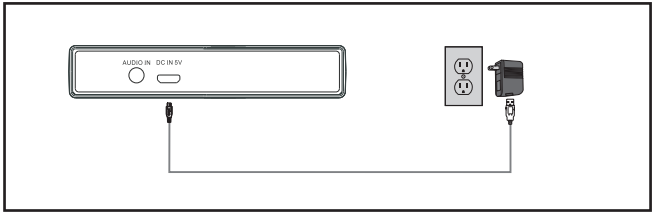

5. After connecting properly, you can stick the transmitter on the TV or put it aside of the TV, as shown below.

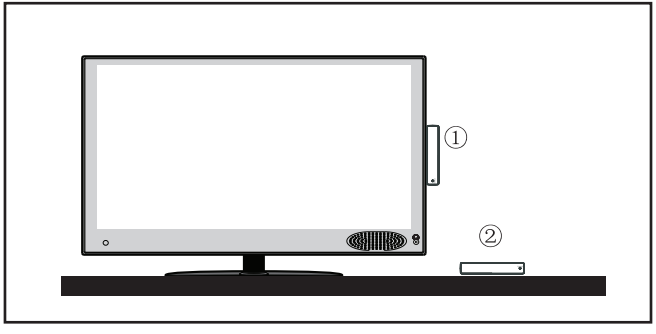

BATTERY CHARGING:

1. Please charge the receiver for 3 hours before the first usage. During charging, the indicator light lits up in red, it will go off when it is fully charged. A fully charged battery can support 8 hours' play time.

2. When the receiver doesn't work or when the battery is low, the indicator blinks, please recharge the receiver.

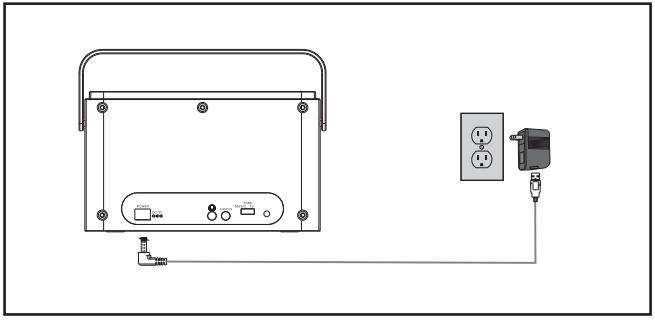

OPERATION:

On/Off, Volume and Tone Control:

1. Rotate the knob to turn receiver **On** or **Off** and to adjust its volume.

OPERATION (con't):

On/Off, Volume and Tone Control(con't):

2. You can turn the speaker volume of your TV to **Low** or to **Off.** On some TVs, you may need to use your remote to go into the TV's Menu to achieve an optimal audio/speaker setting. Please refer to your TV user manual for details.

3. To conserve battery power, please turn the knob to off position when the receiver is not in use.

4. Set the Tone Control to a position that enables you to hear and understand the dialog best.

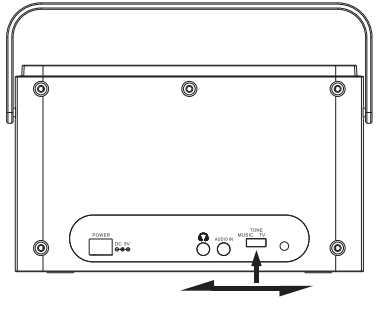

Tone Control

PAIRING:

1. The transmitter and receiver have been paired before the product leaves the factory.

2. If you need to repair the device, use paper-clip to insert into the small hole from side of transmitter, long press the built-in Pairing Button about 3 seconds until the green LED indicator starts blinking, and then turn on the receiver's power switch (if the switch is opened, you must turn it off and re-open). Once it pairs successfully, the Power Indicator blinks in blue 3 times. Re-press, the pairing switch indicator that on the transmitter keeps on and blue LED indicator on the receiver keeps on, it means workable and the pairing process is completed.

3. Power Indicator turns to blue when the receiver and transmitter are successfully paired, it turns to green when they are unpaired.

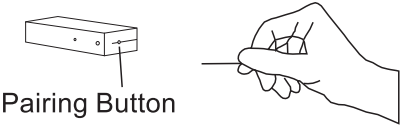

Pairing Button

USING HEADPHONE:

Plug your headphone into the headphone jack, as shown below, if there is no sound from the speaker, adjust the headphone volume by rotating the volume knob.

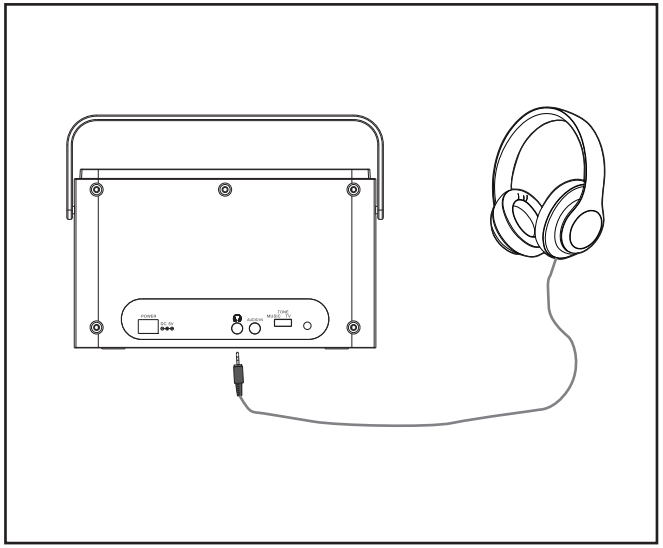

USING THE RECEIVER AS STAND-ALONE SPEAKER:

Connect your audio source to the audio input jack on the receiver, as shown below.

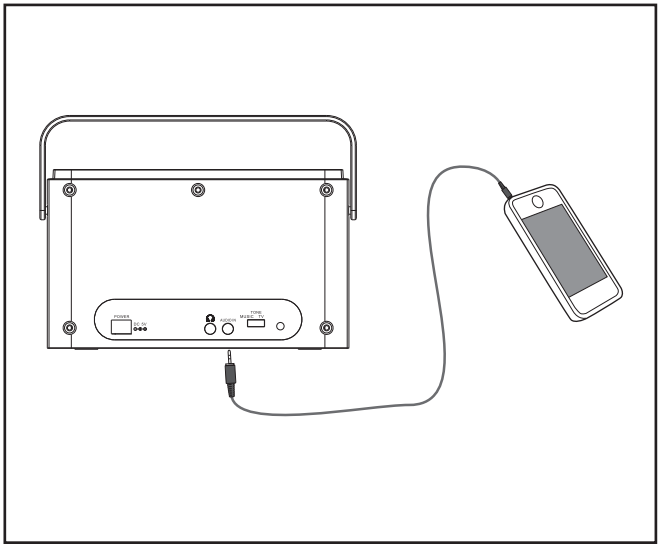

TROUBLESHOOTING:

- No sound from the receiver
  Please check all the connection wires that connect TV back base and transmitter, and make sure the distance between receiver and transmitter is not beyond 30 meters.
- There is sound from the TV, but no sound from the receiver
  Please use the TV remote controller to set and check the setting of driver units of TV menu, to make sure the TV is transfering audio signal to transmitter.
- The Low Battery/Charging Indicator keeps blinking on the receiver
  It indicates the battery is low and the receiver needs to be charged. When it is charging, the red light is on, when full charged, the light will go off. About three hours to finish charging.

CLEANING AND MAINTENANCE:

Unplug the AC Adapter from the wall. Then, use a dry, soft cloth to clean the outside surfaces and the charging contacts on the base. Do not immerse the receiver in water.

SPECIFICATIONS:

(Final product may vary)

Transmission	Wireless Digital
Speakers	5W Class D
Speaker Battery	Built–in Polymer Battery
Operating Range	Over 30M (100 Feet) in an Open Field
AC Adapter Power	100-240VAC/50-60 Hz Input: 5VDC 1A Output
Listening Time	About 8 Hours (at 50% Volume)
Dimensions	17x12.8x5.8CM

FCC INFORMATION FOR USA ONLY:

Part 15 of FCC Rules Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; (2) This device must accept any interference received, including interference that may cause undesired operation.

このたびはご利用いただきありがとうございます。TV 8000 を迅速かつ便利にお使いいただくために、ご使用前にこの説明書をよくお読みください。この短いマニュアルは、一般的な機能および保証の詳細を説明しています。
お客様のご意見、ご感想をお待ちしております。お気づきの点や問題点がありましたら、
cs-tosima@outlook.com までご連絡ください。
詳細については、当社の公式ウェブサイトをご覧ください： www.tosima.net

安全上のご注意

ご使用の前には「安全上のご注意」を必ずお読みになり、記載事項を守って安全に正しくご使用ください。

- 本機は常に乾いた状態に保ってください。水や他の液体　に入れたり、濡れたりしないでください。
- 安全のため、 本機を分解・改造しないでください。事故火災・感電の原因となります。
- 本機は、リサイクル可能なリチウムイオン電池を内蔵しています。リチウムイオン電池の使用方法、保管方法、充電方法に従って正しく使用してください。使用済バッテリーは、金属端子部に絶縁テープを貼って充電式電池リサイクル協力店へお持ちください。
- お手入れの際は必ず、電源プラグをコンセントから抜いてください。電源プラグを抜くときは、電源コードを持たず、必ずプラグ本体を持って抜いてください。電源コードを引っ張って抜くと、電線が切れる原因となります。電源コード、電源プラグが傷んだ状態のまま使用すると、火災、感電の原因となります。
- 本製品は家庭環境で使用することを目的としています。高い安全性や信頼性が求められる環境下で使用しないでください。

セット内容の確認：

お使いになる前に、次のものが梱包されていることをお確かめください。 万一、足りないものがございましたら、カスタマーサービスまでご連絡ください。

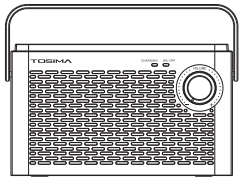

お手元スピーカー（受信機）

ACアダプター



USBケーブル×2

送信機

Φ3.5mm音声ケーブル

取扱説明書



Φ3.5mmオーディオ変換ケーブル

各部の名称

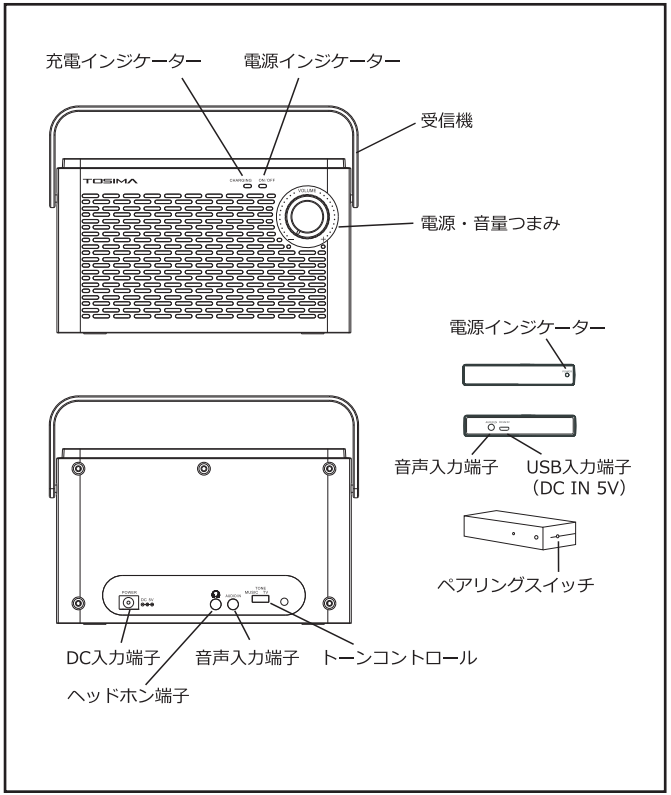

送信機を設置する

1．お持ちのテレビにヘッドホン端子（Φ3.5mmステレオミニプラグ）がついている場合は、付属の音声ケーブルで送信機（音声入力端子）とテレビ（ヘッドホン端子）を接続します。

ご注意：音声ケーブルで接続した場合、テレビからは音声が出なくなります。テレビからも音を出すためには、テレビの設定を変更する必要があります。詳しくはテレビの取扱説明書をご確認ください。

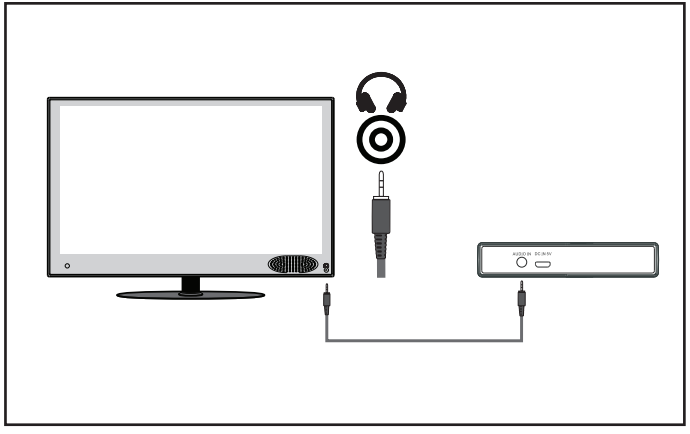

2．お持ちのテレビにRCA音声出力端子（赤白）がついている場合は、付属の音声ケーブルとRCA変換ケーブルで送信機（音声入力端子）とテレビ（RCA音声出力端子）を接続します。

ご注意：RCA変換ケーブルで接続した場合、スピーカーとテレビの両方から音声を出します。

3．送信機はUSB給電対応で、付属のUSBケーブルで送信機（USB入力端子）とテレビ（USB出力端子）を接続すると、テレビから給電できます。

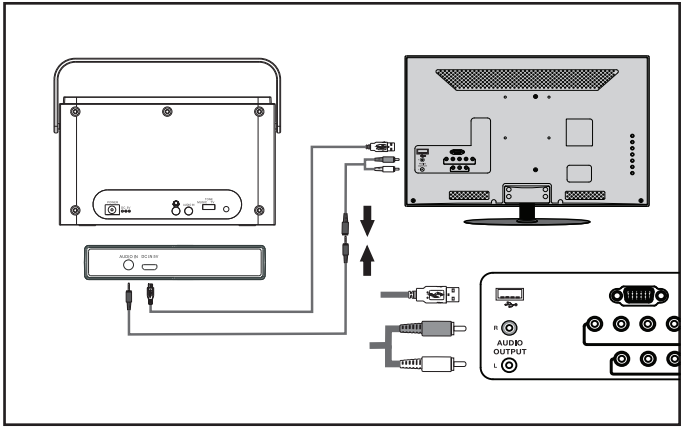

４．お持ちのテレビにUSB出力端子がない場合、USB ACアダプターを使用すれば、コンセントから給電することも可能です。

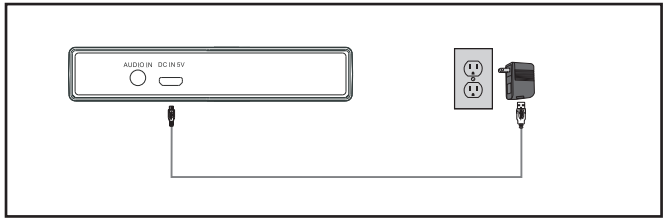

5．接続完了後、送信機はテレビの側面①に貼り付けてもいいし、または横②に置いてもいいです。

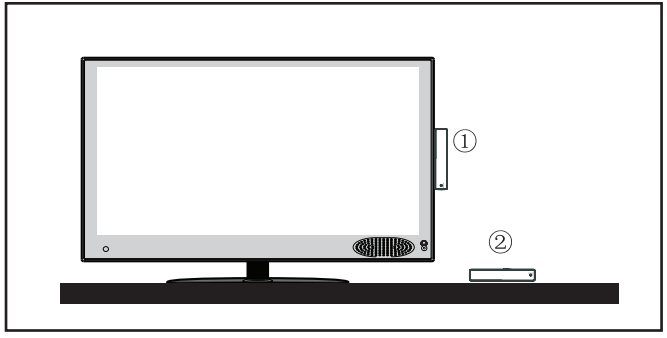

充電について

1.受信機はリチウムイオン電池を内蔵しています。はじめてお使いになるときは、必ず満充電を行ってください（約3時間）。充電中は充電インジケーターが赤色で点灯し、充電が完了すると消灯します。一回のフル充電で約8時間の連続再生が可能です。
2.受信機が動作しない場合、または電源インジケーターが点滅している場合は、受信機を充電してください。

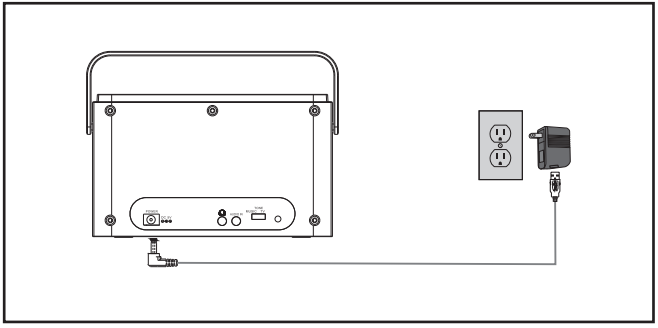

スピーカーの使い方
オン/オフ、音量/トーン調整

1．電源/音量つまみを右回りに回すと、カチッと音がして、電源がオンになり、音量が大きくなります。
2．テレビの音量を調整することができます。一部のテレビでは、リモコンを使用して設定する必要があります。詳しくはお使いのテレビの取扱説明書をご確認ください。
3．使用しないときは、本製品の電源を切り、電源/音量つまみをオフの位置にすることをお勧めします。
4．トーンコントロールスイッチで音質を調整できます。聞き取りやすい音質にセットしてください。

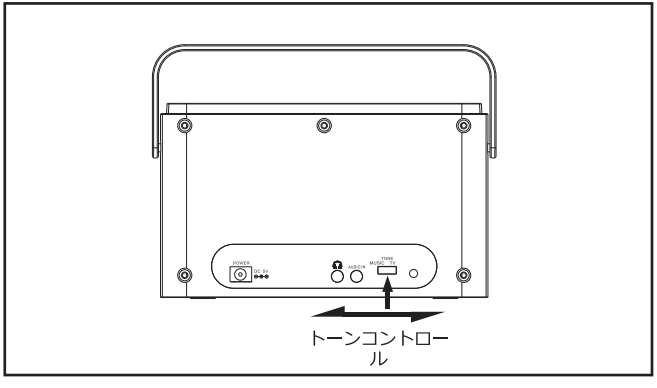

送信機と受信機をペアリングする

1．本製品は工場出荷時に既にペアリング調整が行われております。
2．再度ペアリングするには、次の手順に従います。①まっすぐに伸ばしたペーパークリップまたは類似のツールを使用して、送信機側面の穴に差し込み、隠しペアリングスイッチを3秒以上押すと、電源インジケーターが緑色で点滅します。
②スピーカー本体（受信機）の電源つまみをオンにして（既に電源が入っている場合は、いったん電源を切ってから再度電源を入れてください）、電源インジケーターが青色で3回点滅し、自動的にペアリングを開始します。
③再度送信機のペアリングスイッチを押し、受信機の電源インジケーターが青色で点灯したら、ペアリング完了です。
3．受信機の電源インジケーターが緑色で点灯する場合は、ペアリングに失敗しました。再度ペアリングを実行してください。

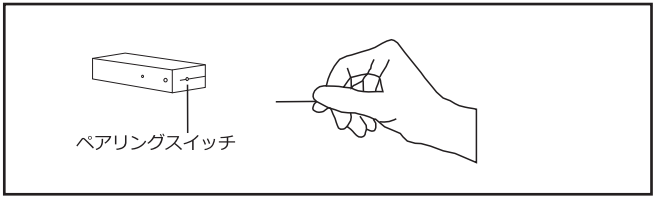

ヘッドホンを使う：

スピーカー本体背面のヘッドホン端子にヘッドホンを接続することで、テレビから離れた場所でヘッドホンを使用することができます。スピーカー本体から音が出ない場合は、電源/音量つまみで音量を調整してください。

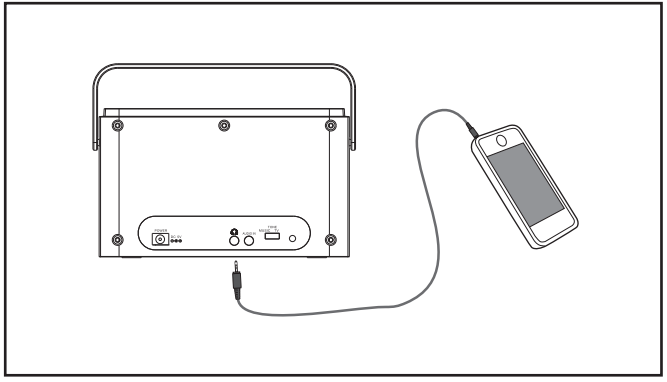

外部スピーカーとして使う

本製品は、PCやスマートフォン、MP3プレーヤーなどの外部スピーカーとして利用できます。 接続する方法は2種類あります。
①スピーカ本体（音声入力端子）に直接接続します。
②送信機に接続します。

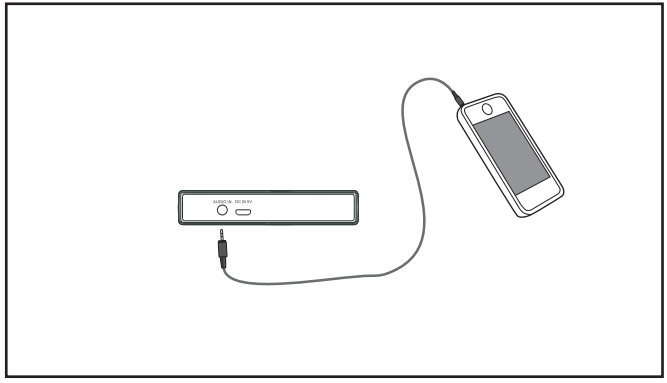

故障かな？と思ったとき

・受信機から音が出ない　電線コード、テレビ、および送信機が正しく接続されていることをご確認ください。送信機から30m以内の場所に受信機を設置してください。

・テレビしか音が出ない　テレビのリモコンを使用して音声出力設定を調整してください。詳しくはお持ちのテレビの取扱説明書をご覧ください。

・受信機の電源インジケーターが点滅している　受信機を充電してください。充電中は赤色で点灯し、充電が完了すると消灯します。電池を完全に充電するには約3時間かかります。

お手入れ：

電源を切り、電源プラグ、音声ケーブルを本機から抜き、乾いた柔らかい布拭いてください。水に浸さないでください。

仕様：

送受信方式 ..... デジタルワイヤレス
出力電力..... 5W Dシリーズ
使用電池..... 内蔵リチウムポリマー電池
通信距離..... 30m以上
電源アダプター..... 入力 100-240V AC/50-60Hz
..... 出力 5V DC 1000mA
連続使用時間..... 約8時間（50%音量 ）
寸法..... 幅170x高さ128x 奥行き58mm

WARRANTY

1. Warranty Content: This unit is sold with one year warranty from the date of purchase.
2. Damage of products caused by the following reasons are outside the scope of free warranty.

- Beyond the warranty period, damage or failure caused by the manipulation without following the request of the manual.
- User's artificial damage, and the damage of unauthorized disassembly, unauthorized maintenance and other artificial damage.

3. 30-Days Free Replacement: Any defective product can be replaced or repaired within the 30 days of purchase. The customer can choose free replacement or free repair. If the customer asks for free replacement, he/she can ask for the same version of the product he/she bought, if that version is no longer available, with custom-er's consent, we will replace it with another product of the same brand with similar or better performances.

Do not dispose of the device in normal domestic waste

Dispose of the device over a registered waste disposal firm or through your communal waste disposal facility. Observe the currently valid regulations. In case of doubt, consult your waste disposal facility.